



# ASSEMBLY INSTRUCTION BELLS DINING TABLE 210

### Pre Assembly:


- Please read all instructions before beginning assembly
- Place all parts on a carpet or foam in shipping box.
   Find the letter (A, B, C,...) on each part and check with below part list to ensure we have all components.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- This product requires two people to do assembly.

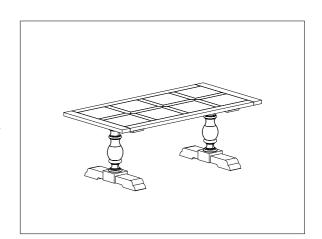


#### Parts Included:

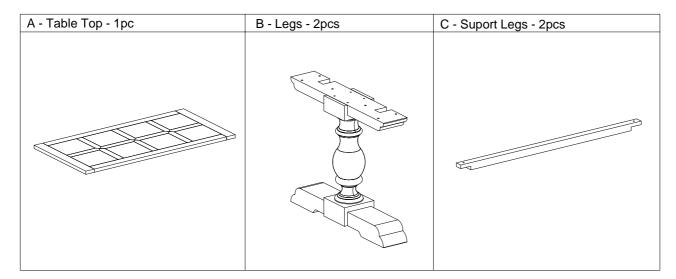

C - Bolt - Ø8*50- 14 pcs	D - Washer - 1*Ø8 * 13 - 18pcs	E - Washer - 1*Ø8 * 16 - 18pcs	F - Allen Key -1pc
(a) (b) (b) (c) (c) (c) (c) (c) (c) (c) (c) (c) (c			
G - Bolt - Ø8*35- 4 pcs			
(1)			

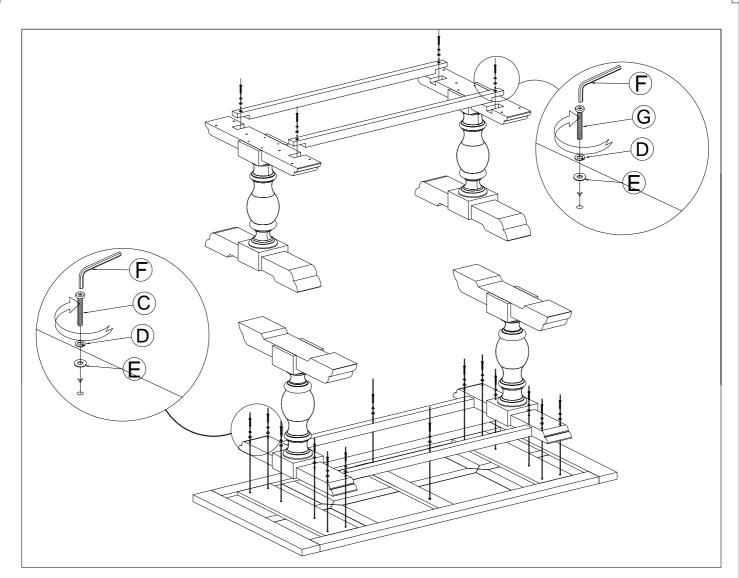

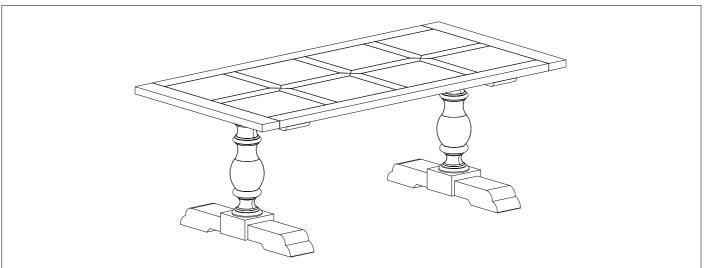

## Care Instructions:


- Hardware may loosen overtime. Periodically check to make sure all components are tight. Re-tighten if necessary.
- Should clean dust with soft dry cloth
- For indoor use only




# ASSEMBLY INSTRUCTION BELLS DINING TABLE ROUND 120

### Pre Assembly:


- Please read all instructions before beginning assembly
- Place all parts on a carpet or foam in shipping box.
   Find the letter (A, B, C,...) on each part and check with below part list to ensure we have all components.
- Save all packing materials until assembly is complete to avoid accidentally discarding smaller parts or hardware.
- This product requires two people to do assembly.

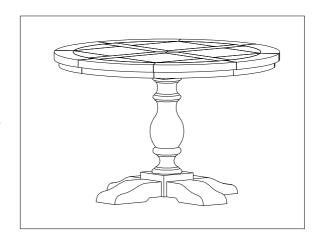


#### Parts Included:

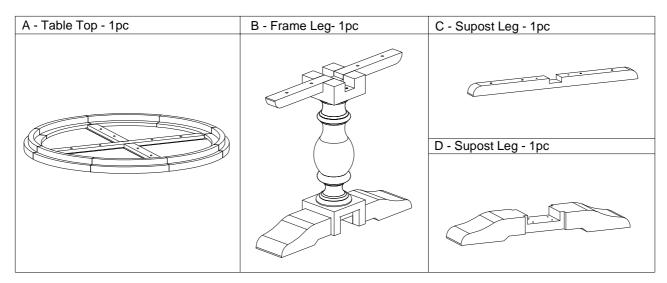

C - Bolt - Ø8*50- 14 pcs	D - Washer 1*Ø8 * 13 - 14pcs	E - Washer 1*Ø8 * 16 - 14pcs	F - Allen Key - 1pc
(a) (minimum)			

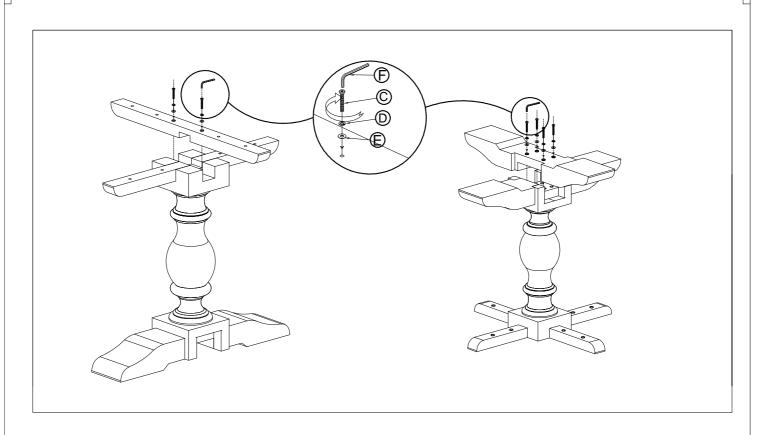

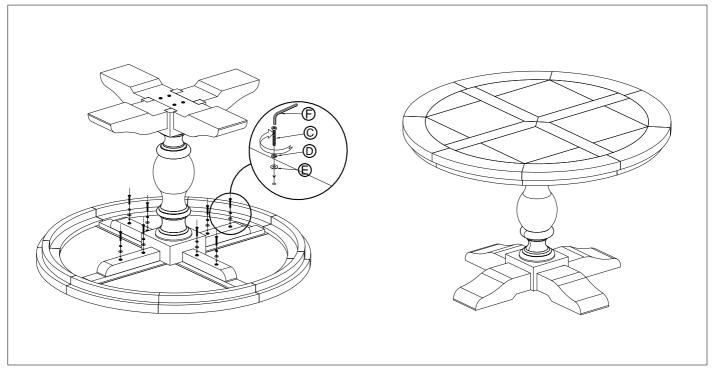

## Care Instructions:

- Hardware may loosen overtime. Periodically check to make sure all components are tight. Re-tighten if necessary.
- Should clean dust with soft dry cloth
- For indoor use only