

ASSEMBLY INSTRUCTIONS

 
 


MODEL : 7073

Thanks you for purchasing this quality product. Be sure to lay all components on a soft and clean surface before assembly in order to avoid components from being scratched.

 
 



 

CAUTIONS :

1. Check contents against list for quantity.
2. Familiarize yourself with the components and hardware by reviewing the Assembly Instructions.
3. Do not over tightened the screws and bolts as it may damage the threads.
4. Keep all hardware parts out of the reach of children.
5. Please "LIFT UP & MOVE" the chair when ever you want to shift it.

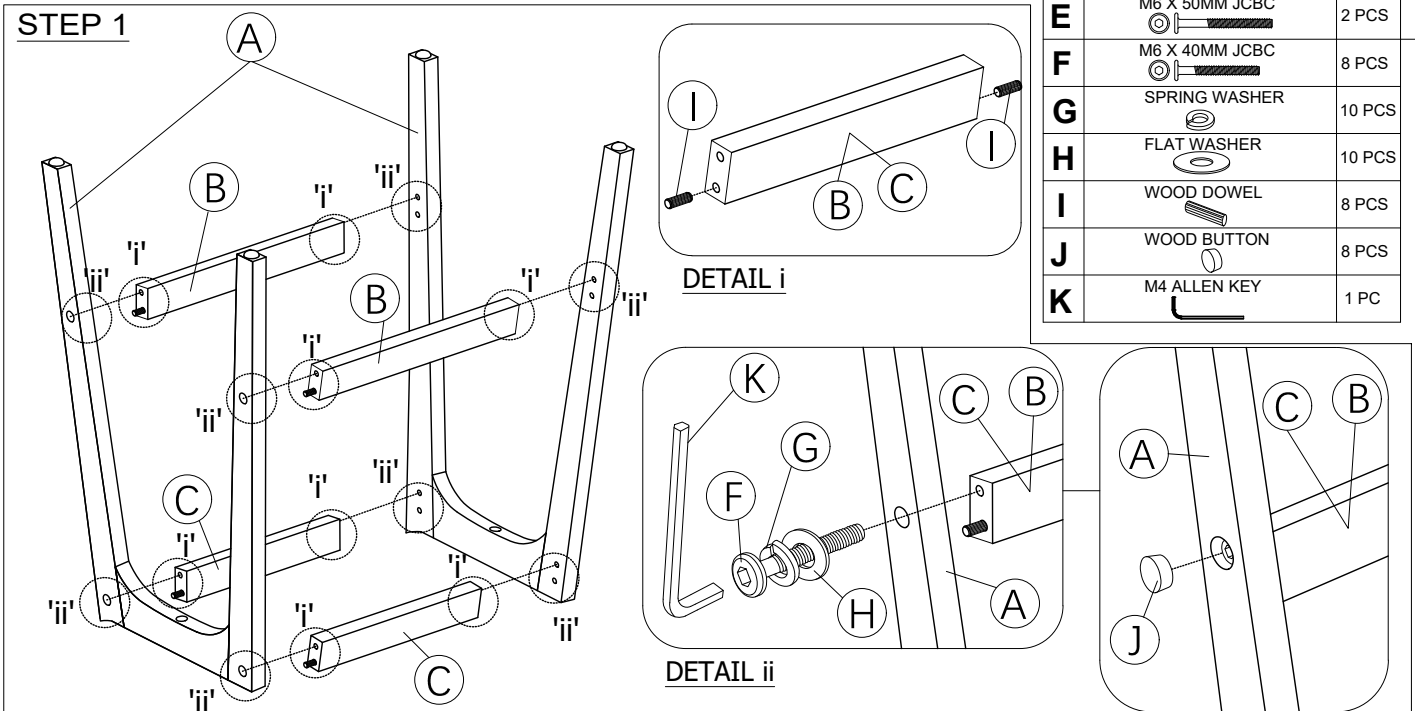
PARTS LIST

NO.	DESCRIPTION	QTY
A	LEG L&R 	2 PCS
B	WOODEN SUPPORT (LONG) 	2 PCS
C	WOODEN SUPPORT (SHORT) 	2 PCS
D	SEAT 	1 PC

HARDWARE LIST

NO.	DESCRIPTION	QTY
E	M6 X 50MM JCBC 	2 PCS
F	M6 X 40MM JCBC 	8 PCS
G	SPRING WASHER 	10 PCS
H	FLAT WASHER 	10 PCS
I	WOOD DOWEL 	8 PCS
J	WOOD BUTTON 	8 PCS
K	M4 ALLEN KEY 	1 PC

STEP 1



STEP 2

