 


 
 
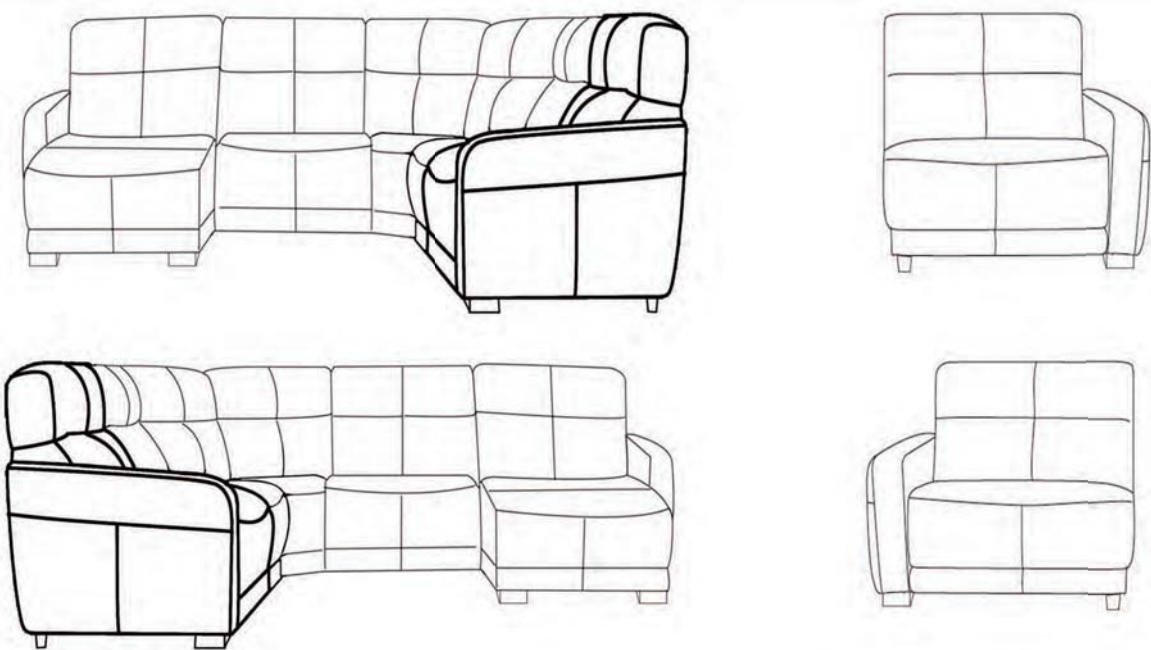 



 



# Assembly Instruction for Chicago 31702AEM

 


## LIST OF PARTS

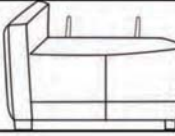 
TOOLS REQUIRED:NO TOOLS REQUIRED

### PART LIST

NO	Description	Item	Quantity
A	Left Arm Backrest		1
B	Left Arm Seat		1
C	wall plug transformer		1
D	Front wood leg		1
E	Back wood leg		1
F	Central plastic leg		3
G	L metal leg		1
H	M10 screw		1
I	M6 screw		2
J	washer		1

 
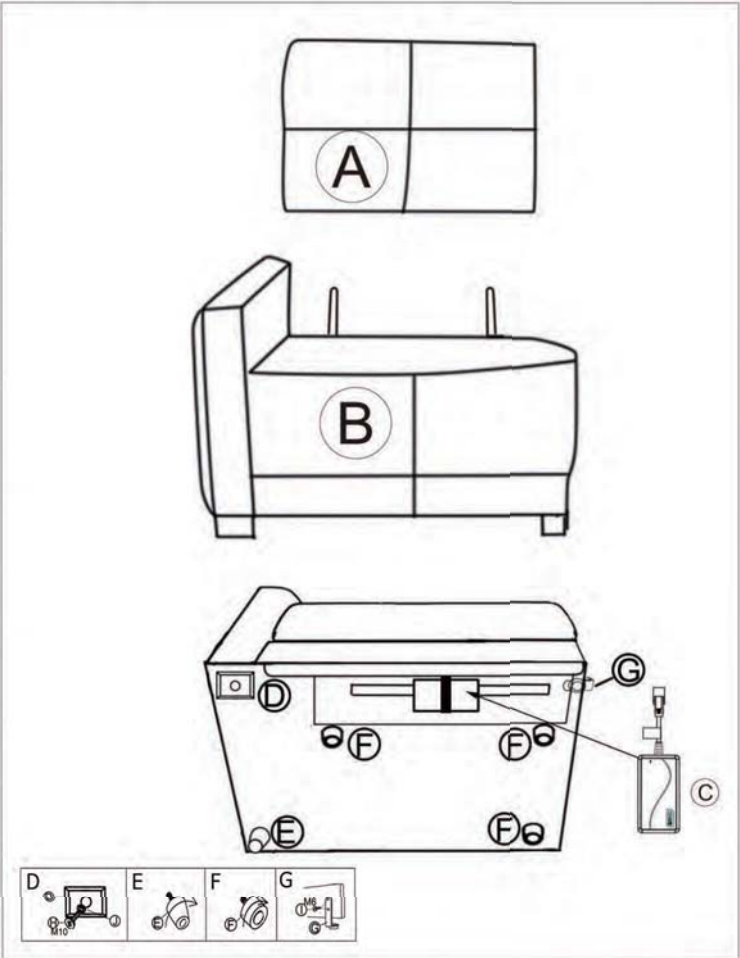 



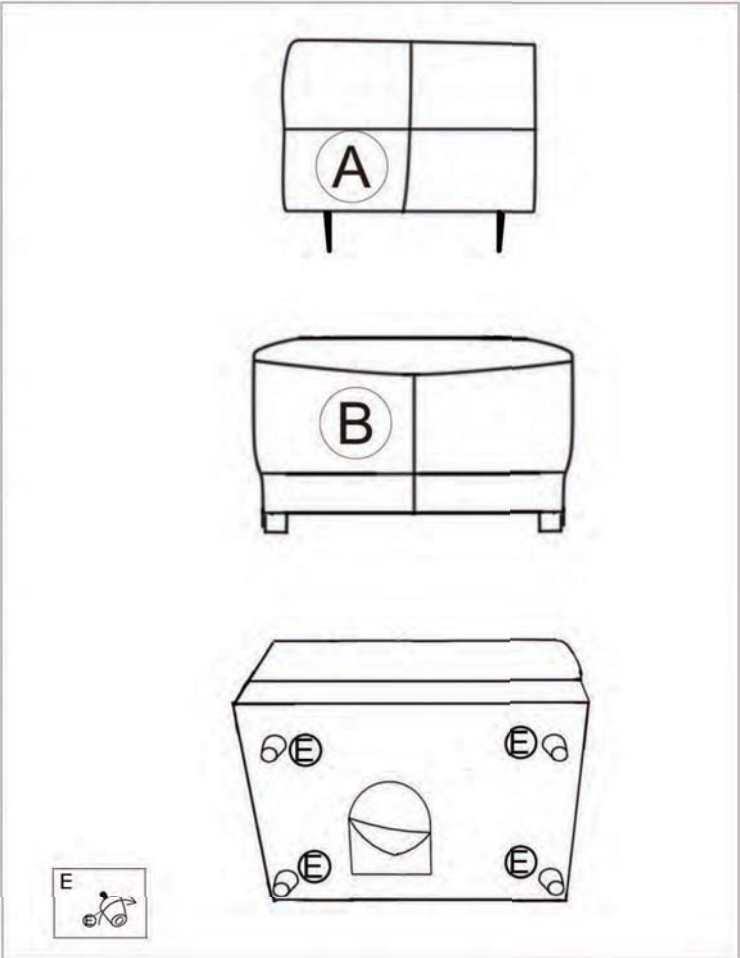 
# Assembly Instruction for Chicago 31702AEM

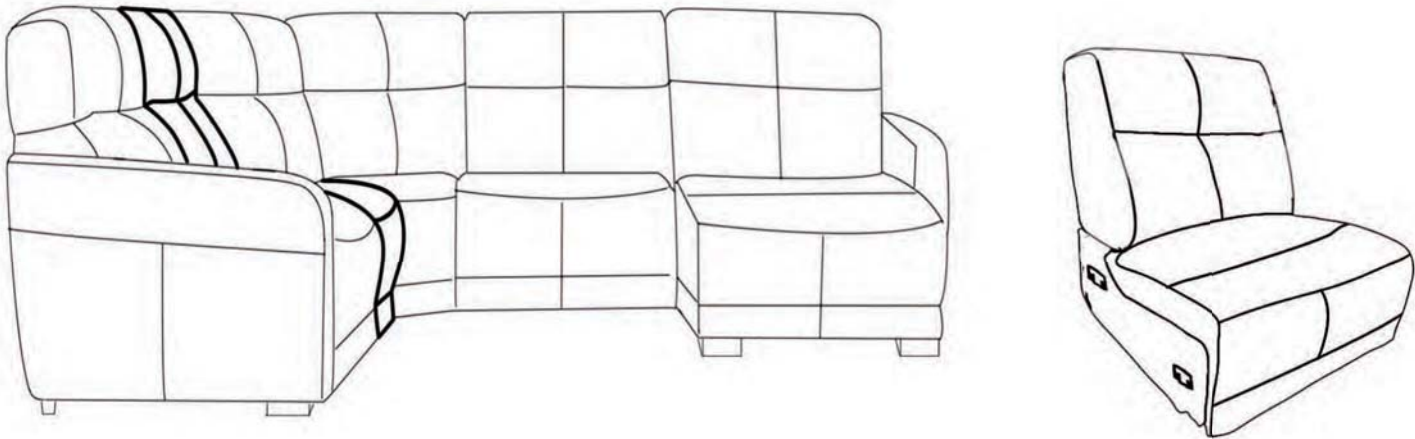

 
## LIST OF PARTS

TOOLS REQUIRED:NO TOOLS REQUIRED

 

PART LIST			
NO	Description	Item	Quantity
A	Armless Backrest		1
B	Armless Seat		1
E	Wood leg		4

 


# Assembly Instruction for Chicago 31702AEM

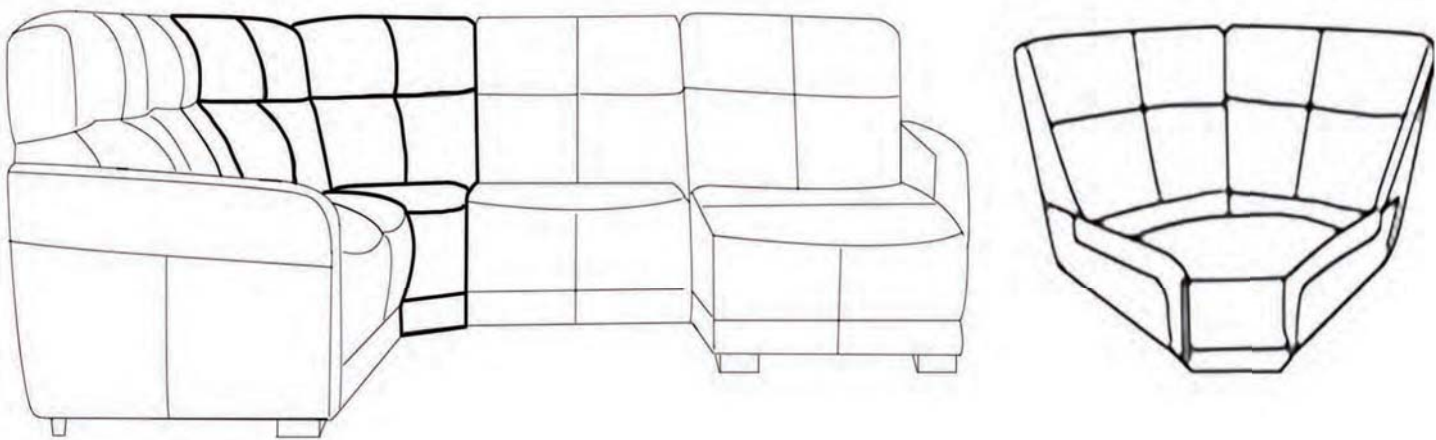

 
## LIST OF PARTS

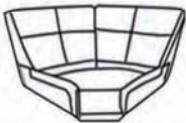TOOLS REQUIRED:NO TOOLS REQUIRED			
PART LIST			
NO	Description	Item	Quantity
A	Wedge		1
E	Wood leg		5

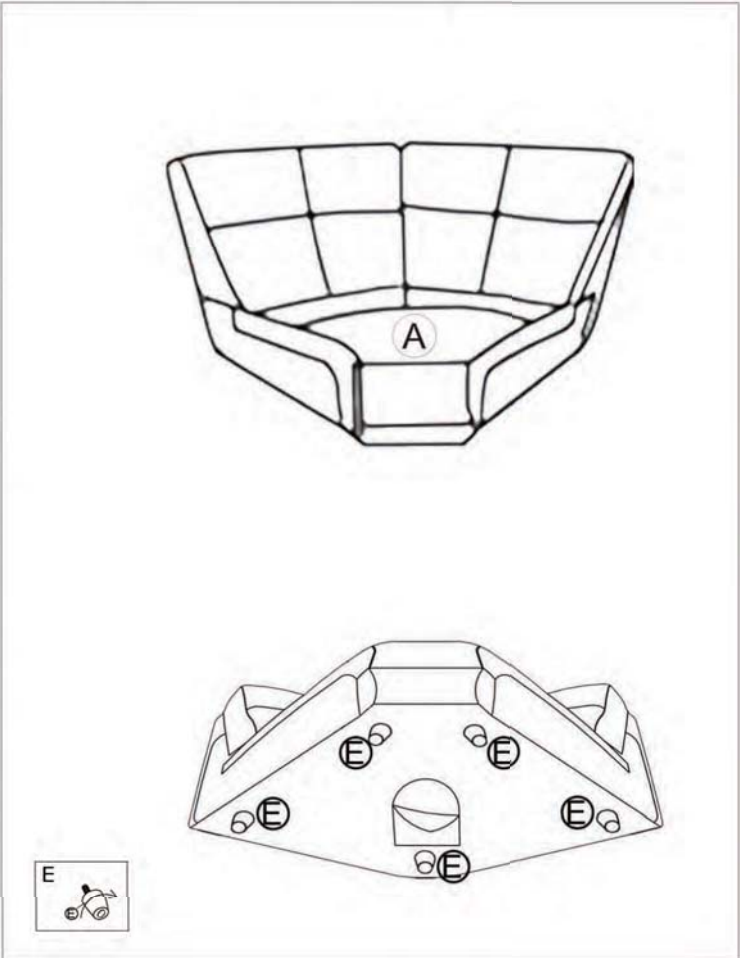



 
 
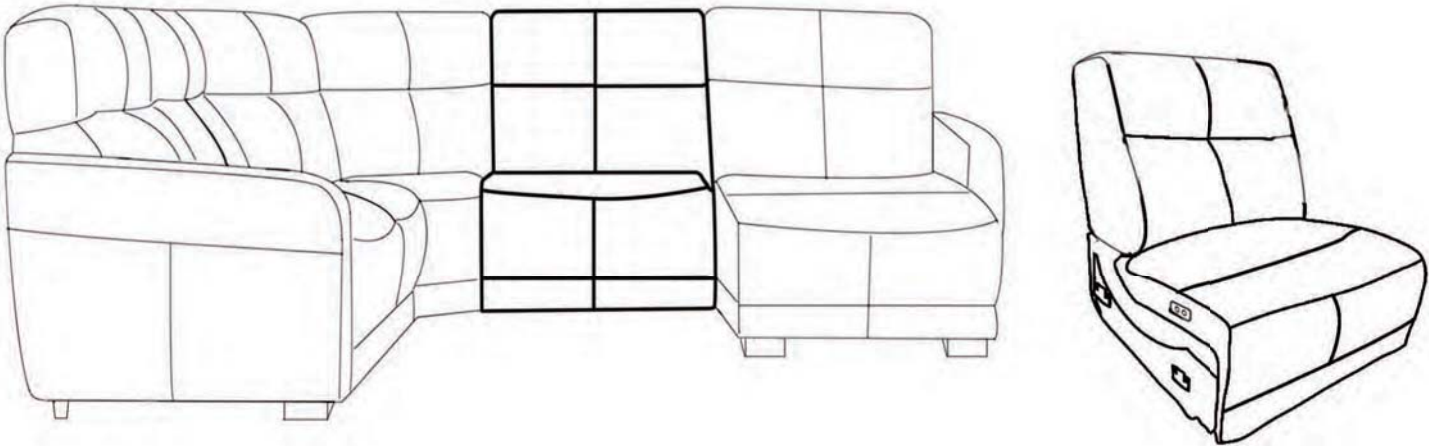 



# Assembly Instruction for Chicago 31702AEM

 
 
 


## LIST OF PARTS

 
 
 
 
TOOLS REQUIRED:NO TOOLS REQUIRED

### PART LIST

NO	Description	Item	Quantity
A	Armless Backrest		1
B	Armless Seat		1
C	wall plug transformer		1
F	Plastic leg		4
G	L metal leg		2
I	M6 screw		4

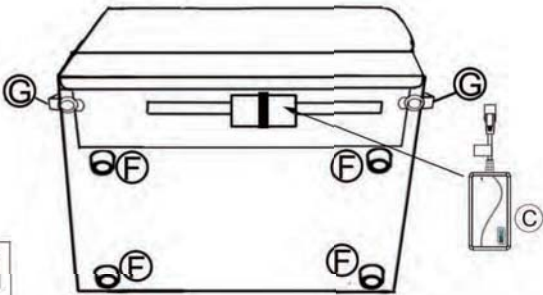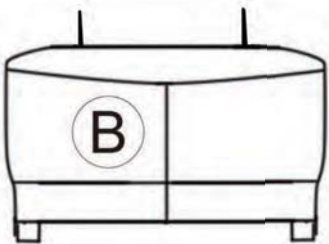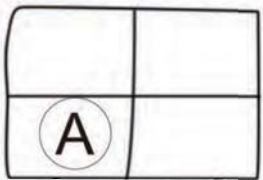
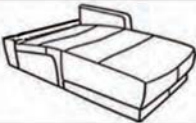 
 


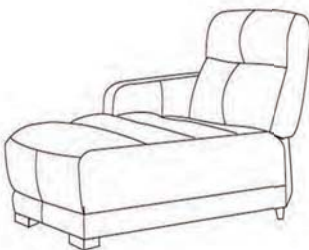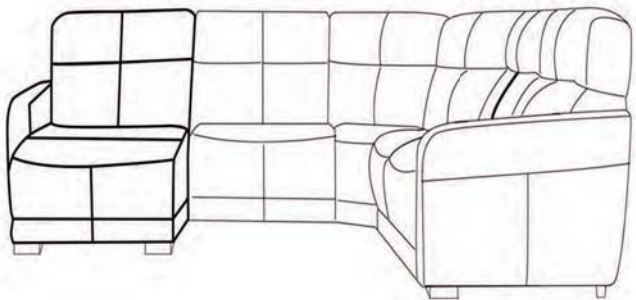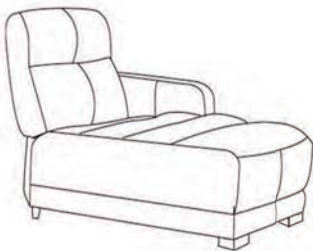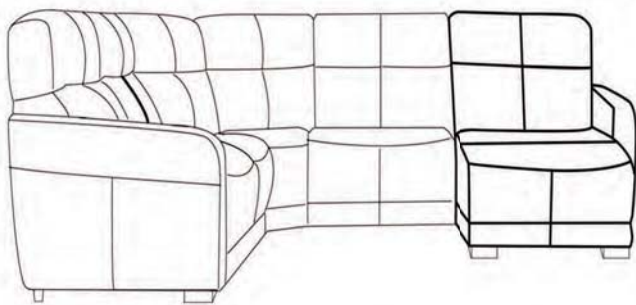


 
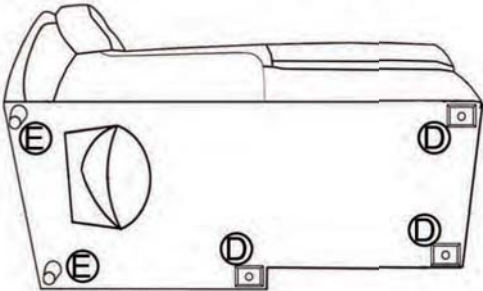 
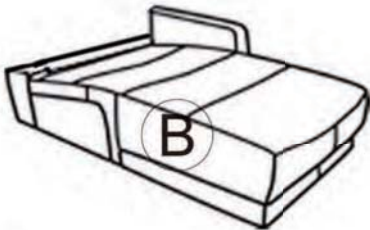 
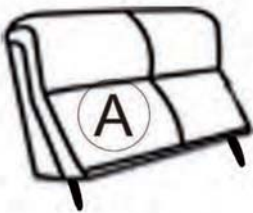 
# Assembly Instruction for Chicago 31702AEM



## LIST OF PARTS

TOOLS REQUIRED:NO TOOLS REQUIRED

PART LIST			
NO	Description	Item	Quantity
A	Chaise Backrest		1
B	Chaise Seat		1
D	Front wood leg		3
E	Back wood leg		2
H	screw M10		3
J	washer		3



 
 


# ASSEMBLY INSTRUCTIONS

 


## STEP 1:

 
Please put the chair upside down, find the sofa legs on the bottom of sofa, which strapped on the mechanism (FOR MOTION SOFA), or open the zipper on the bottom of sofa, take out the sofa legs (FOR STATIONARY SOFA).

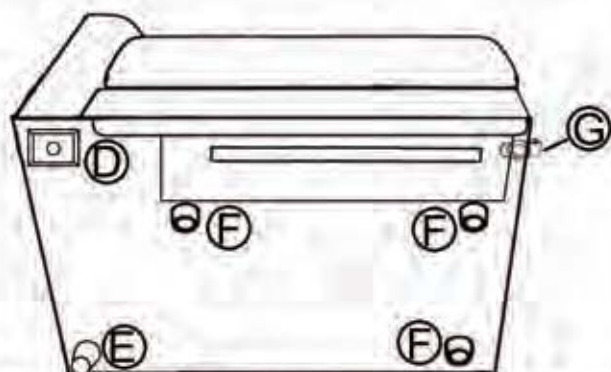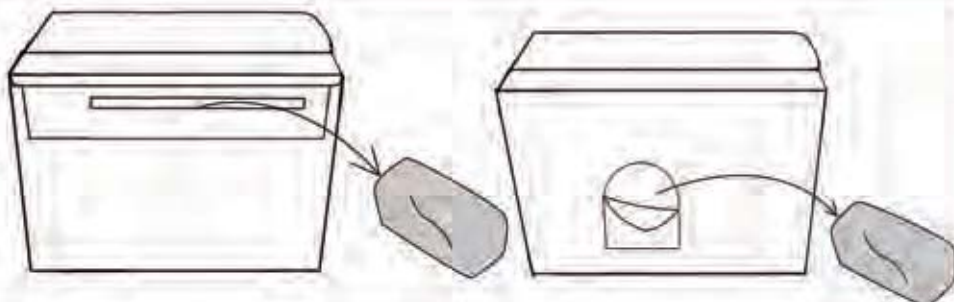

 
SKU:13131709/17131703/13231701/ 17131705

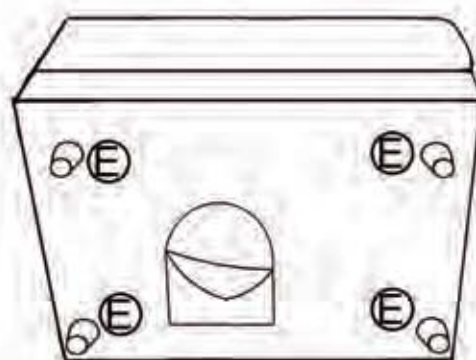

SKU:13531707/17531701

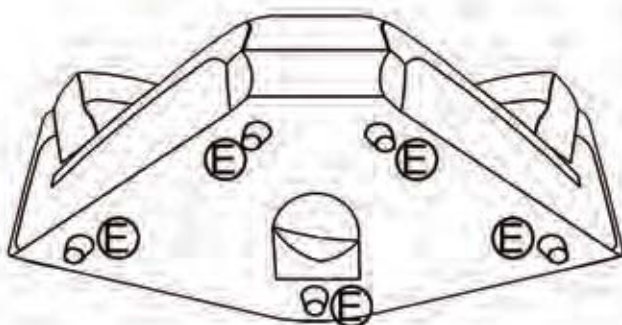

SKU:13331703/17331707

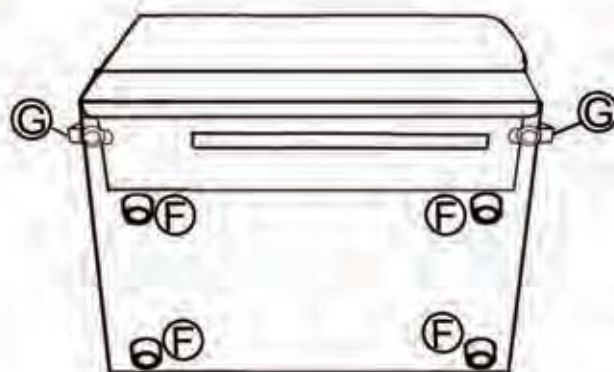

SKU:13431705/17431709

 
Install all legs accordingly to above instruction:

1) Front leg: Attach the front wood leg (D) into the bottom of chair by using 1 piece washer (J) and M10 screw (H) through the hole. Use hand to tighten the M10 screws (H) clockwise until secure.

2) Back leg: Insert the back leg (E) in to the hole. Use hand to tighten the back leg (E) clockwise until secure.

3) Central leg: Insert the central leg (F) in to the hole. Use hand to tighten the central leg (F) clockwise until secure.

4) L metal leg: Attached the L metal leg (G), using 1 piece screw (I) through the hole, Use hand to tighten until secure.

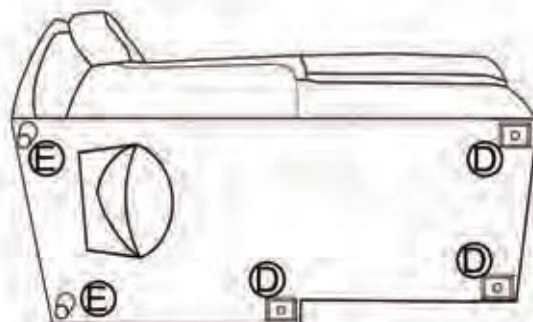 


SKU:13731709/17731703/13731701/17731705

# ASSEMBLY INSTRUCTIONS

 
## STEP 2:

Install the Backrest(A) into the Seat (B) by positioning the female metal receiver brackets over the male metal posts. Ensure that female metal receiver brackets on each side of the backrest are positioned over the seat metal posts. push down the female brackets over male posts simultaneously until each side is locked into place an audible "click" is heard. Install all backrests of sectional pieces in the same way described above.

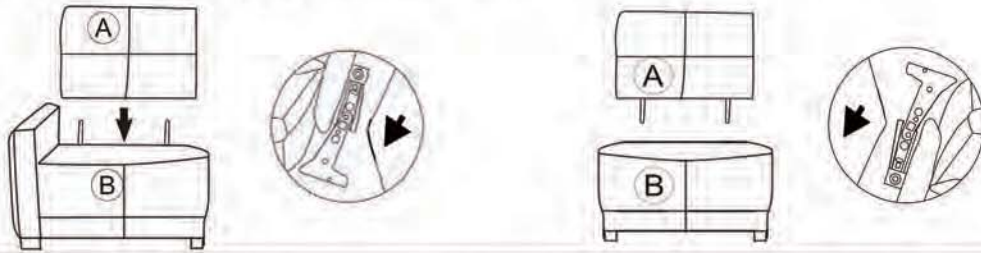 


## STEP 3:

Begin sectional connection by placing the power recliner # 1 in desired location in room. Then start sectional connection by placing # 2 into piece # 1. Continue sectional connection with piece # 3 thru #5 following the same method described above.

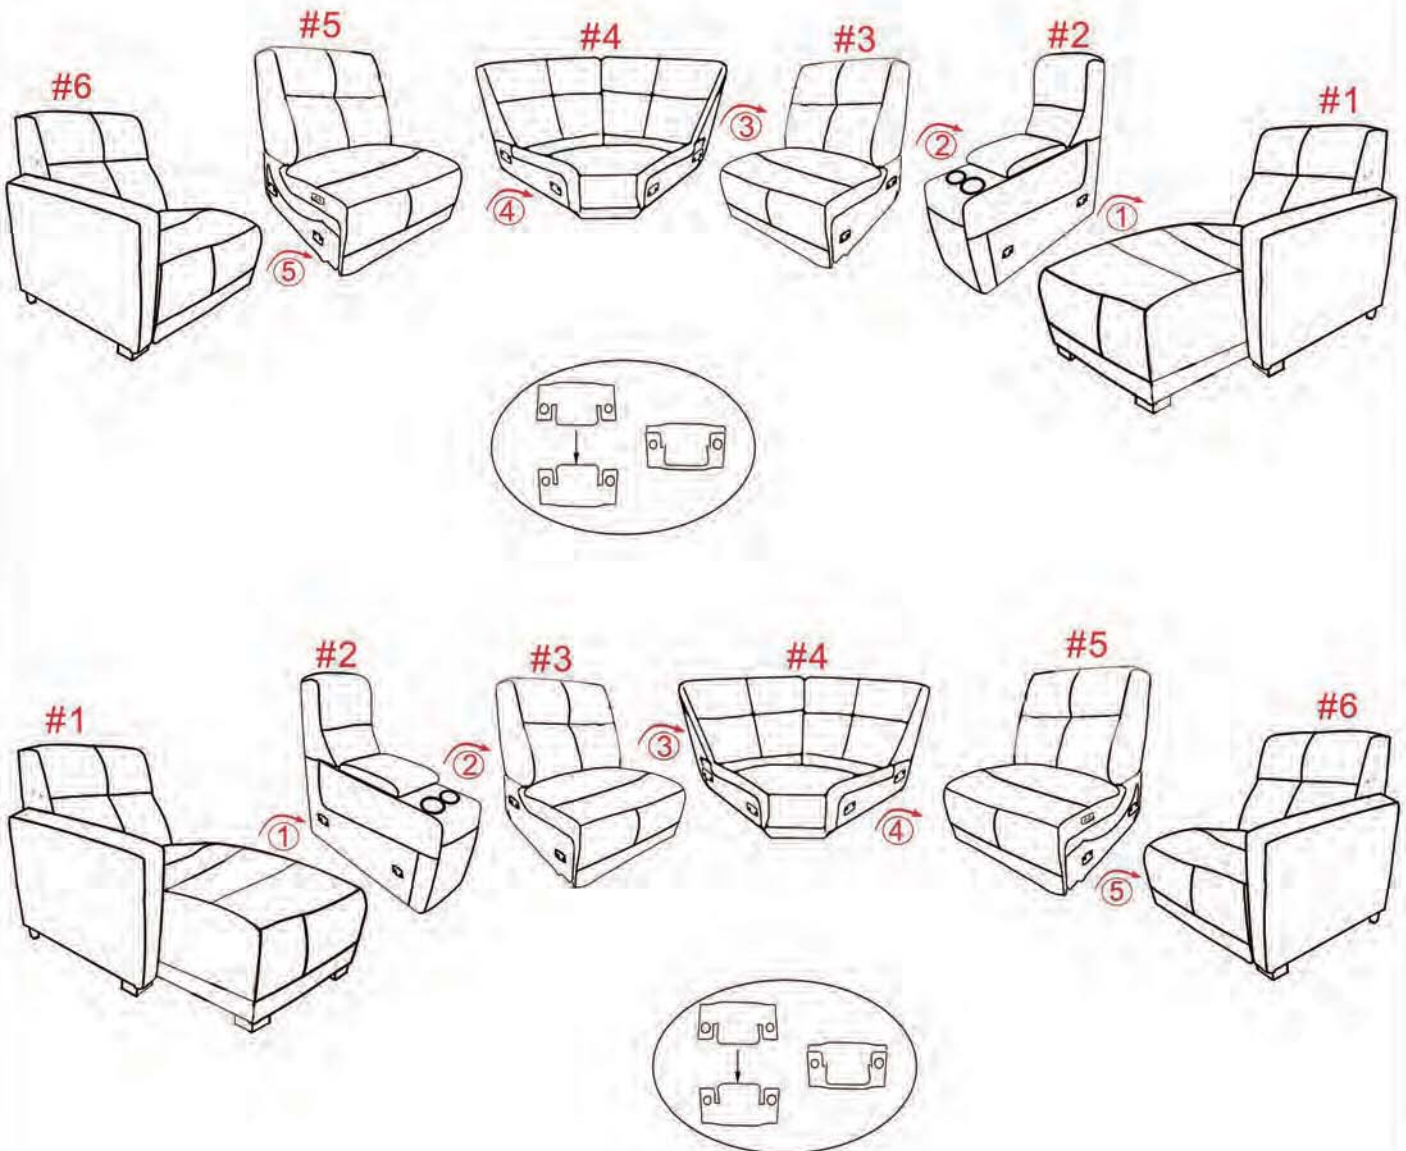

 


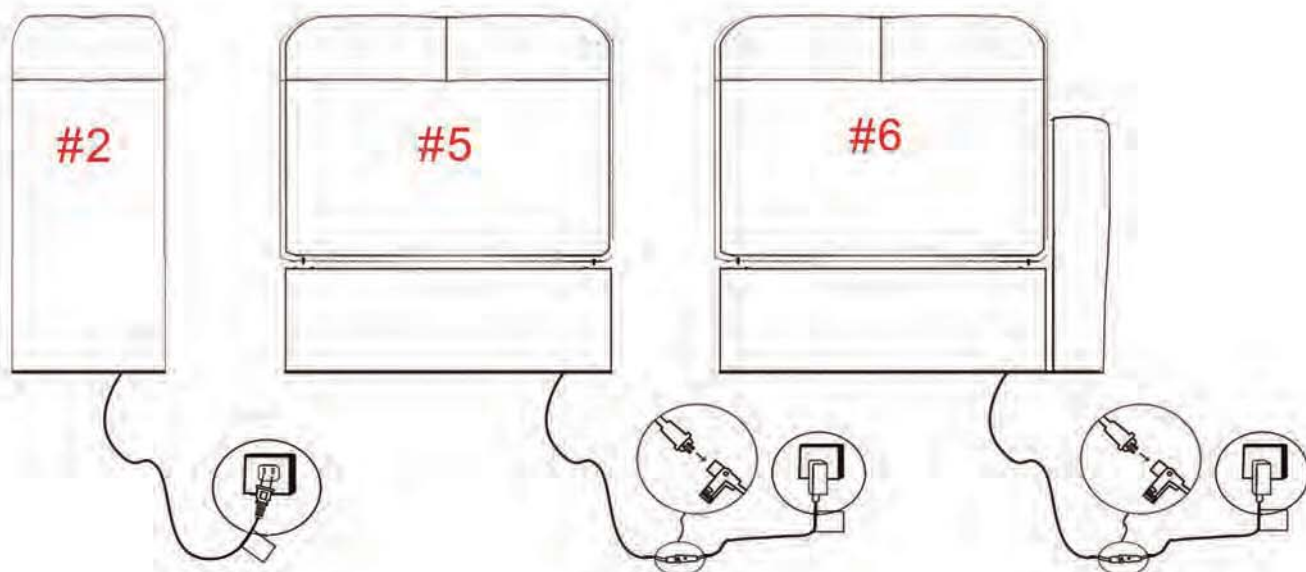

## STEP 5:

Connect wall plug transformer from Left Arm Seat to outlet.

wall plug transformer to Electrical Outlet

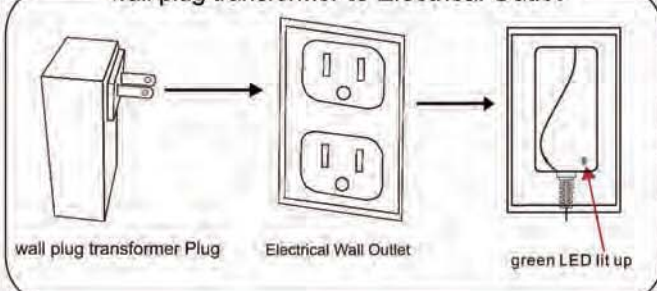

**⚠ WARNING**  
Misuse can result in FIRE or DEATH by ELECTRICAL SHOCK

Read all instructions before using this furnishing.

**DANGER – To reduce the risk of electric shock**  
1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

**WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:**

1. Unplug from outlet before putting on or taking off parts.
2. Never operate this furnishing if it has a damaged electrical cord or plug, if it is not working properly, or if the electrical cord or plug has been damaged or dropped into water. Stop using this furnishing and call a service center for examination and repair.
3. Keep the electrical cord and plug away from heated surfaces and other heat sources.
4. To disconnect, turn all controls to the off position, then remove plug from outlet.
5. When operating, ensure that electrical cord is not under the base, legs, or motion mechanism to avoid damage to electrical cord or plug.
6. Do not strain or stretch electrical cord.
7. Do not use extension cords or power strips.
8. Keep out of reach of children. This is not a toy.

**⚠ WARNING**  
El mal uso puede provocar INCENDIO o MUERTE por DESCARGA ELÉCTRICA

Leer todas las instrucciones antes de usar este mobiliario.

 
**PELIGRO – Para reducir el riesgo de descarga eléctrica:**  
1. Siempre desenchufe este accesorio de la toma de corriente eléctrica antes de limpiarlo o repararlo.

**ADVERTENCIA: para reducir el riesgo de quemaduras, incendios, descargas eléctricas o lesiones a personas:**

1. Desenchufe del tomacorriente antes de colocar o quitar partes.
2. Nunca opere este accesorio si tiene un cable o enchufe eléctrico dañado, si no funciona correctamente, o si el cable o el enchufe eléctrico se ha dañado o se ha caído al agua. Deje de usar este equipamiento y llame a un centro de servicio para que lo examinen y lo reparen.
3. Mantenga el cable eléctrico y el enchufe lejos de superficies calientes y otras fuentes de calor.
4. Para desconectar, gire todos los controles a la posición de apagado, luego retire el enchufe del tomacorriente.
5. Al operar, asegúrese de que el cable eléctrico no esté debajo de la base, las patas o el mecanismo de movimiento para evitar dañar el cable eléctrico o el enchufe.
6. No fuerce ni estire el cable eléctrico.
7. No utilizar cables de extensión o tomas de corriente.
8. Mantener fuera del alcance de los niños. Esto no es un juguete.

## STEP 6:

## ELECTRICAL CONTROLS

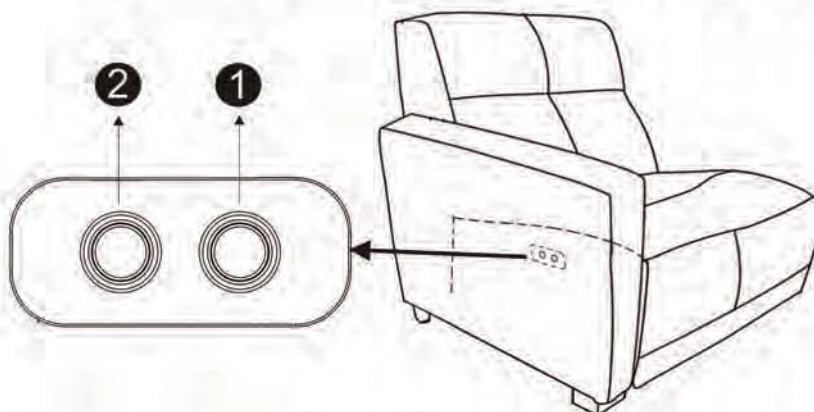

1. Press button **1** to recline the chair to desired position.
2. Press button **2** to raise the chair to the upright position.

 


## WARNINGS

\*Keep unit at least 24" from all heat sources.

\*Avoid placing unit in areas where unit can be exposed to direct sunlight other powerful light sources, as fading or discoloration may occur.

Maintain minimum of 6" space between the furniture backs and wall.

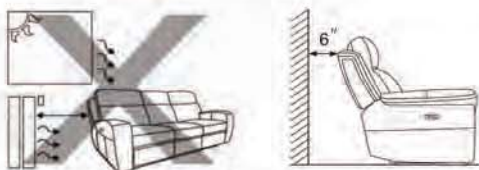

 
\*Do not reach under seat when mechanism is operating or serious injury may occur.

\*Reclining mechanism should only be operated while seated properly.



\*Do not sit on arms or backrest.

\*Do not jump or roughhouse on furniture.

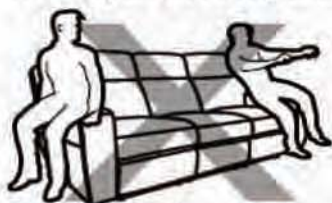

\*If unit must be moved, do not drag. Unit must be lifted in order to be moved.



\*Do not continuously operate mechanism for more than one minute or unit may go into protection mode by shutting down to prevent overheating.

\*Unplug unit from power source prior to cleaning mechanism.

\*Do not allow electrical components to come into contact with any liquids.

## CARE AND CLEANING

\*Upholstered furniture is packaged tightly to protect it during transit. This packaging can sometimes cause creases or misshaped cushions when the furniture comes out of the packaging. These issues will correct themselves over time as the fibers of the cushions are exposed to air. However, shaping the cushions with your hands can alleviate the creases and compressed fibers more quickly.



Before shaping

After shaping

\*Dust often and use a vacuum cleaner to remove debris from seams and crevasses.

\*Use a soft damp cloth to gently clean soiled areas and wipe clean. Do not rub.

\*Do not use household cleaners or solvents. Such cleaners may cause damage and/or discoloration.

\*Do regularly use dedicated leather care product onto the leather furniture to prevent built up of body oils.

## TROUBLE SHOOTING

PROBLEM	SOLUTION
Not Reclining	Ensure that wall power outlet is operational Step 4,5,6
USB not working	Check all power connections Step 4,5
Backrests gaps	Ensure the backrests are properly clipped into the male posts located on seat mechanism. (Step 2) Check that brackets are not loose, positioned improperly or bent.