


Parts

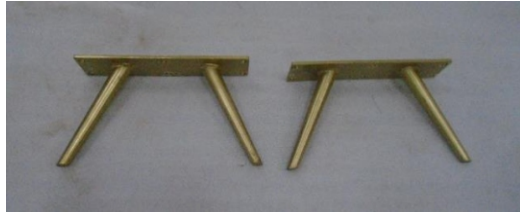

2 pcs metal feet




Allen bolt and
spanner

Place the cabinet
inverted on a clean
surface. Align the metal
feet holes with that on
the cabinet and screw
with the help of allen
bolts provided

Assembly Instruction



Align A with A and
screw the bolts

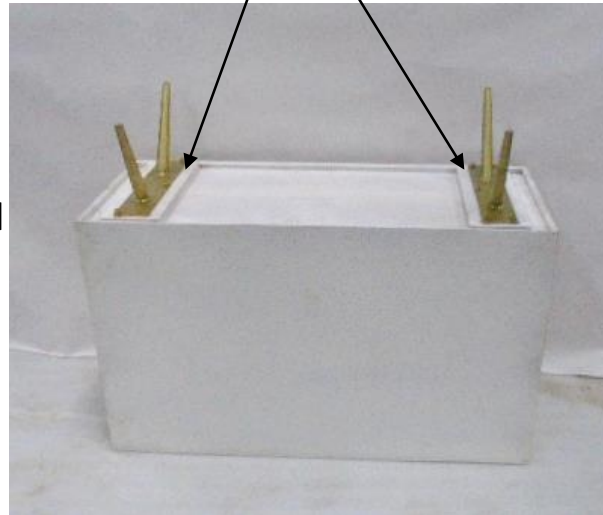

AN0234793



Final Assembled product