

Parts



2 pcs metal feet




Allen bolt and spanner

Place the cabinet inverted on a clean surface. Align the metal feet holes with that on the cabinet and screw with the help of allen bolts provided

Assembly Instruction



Align A with A and screw the bolts

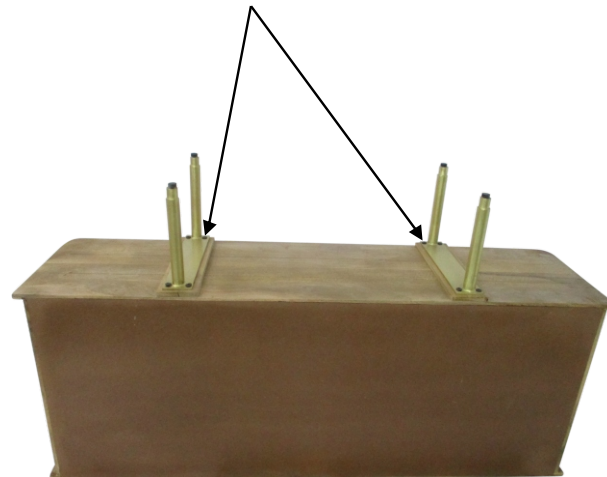

Final Assembled product