




## **Zdesign** Assembly Instruction CD - 2158

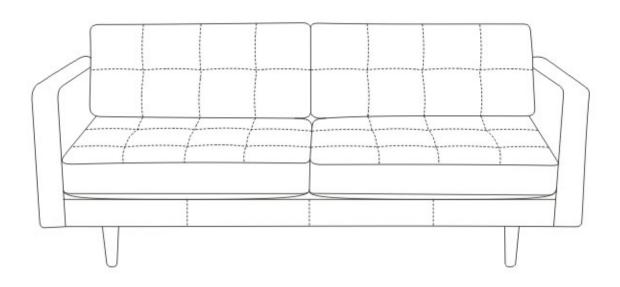

## Hardware Provided

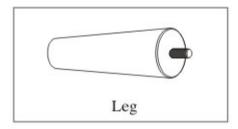


- 1. Please turn sofa over
- 2. Please find the hardware underneath the non woven cover
- 3. Please fix sofa as diagram as below

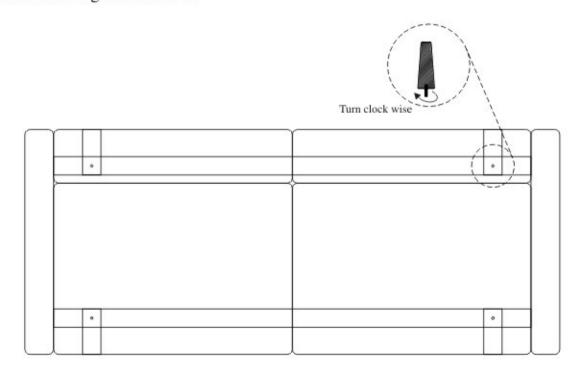




## Zdesign Assembly Instruction **CD - 2158(1S)**

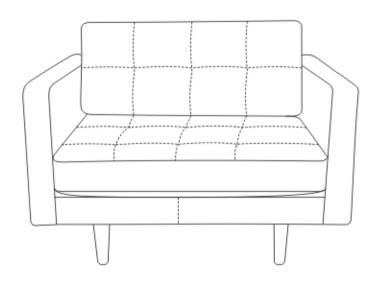

## Hardware Provided

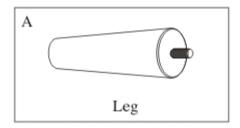

- 1. Please turn sofa over
- 2. Please find the hardware underneath the non woven cover
- 3. Please fix sofa as diagram as below

