


ASSEMBLY INSTRUCTION

CAREFULLY UNPACK ALL PARTS BEFORE ATTEMPTING TO ASSEMBLE.

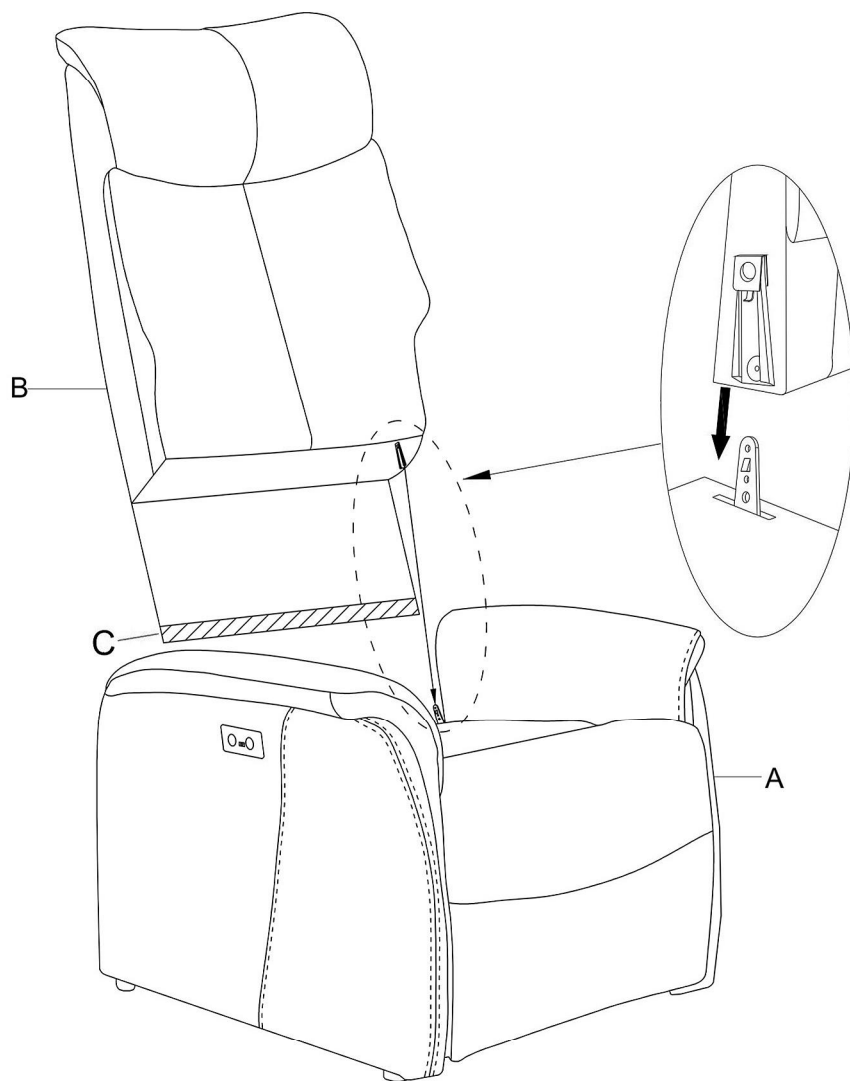

1. INSERT THE BACK CUSHION (B) IN THE HOLE AS PER THE DEMONSTRATION ATTACHED.

2. PUT THE DOWNMOST VELCRO (C) OF THE BACK CUSHION ON THE RELEVANT POSITION AND STICK WELL.

CAUTION: NEED AT LEAST TWO PERSONS TO COMPLETE THE ASSEMBLY.

PARTS LIST

A. SEAT CUSHION	1
B. BACK CUSHION	1
C. VELCRO	1

CM32998KG